


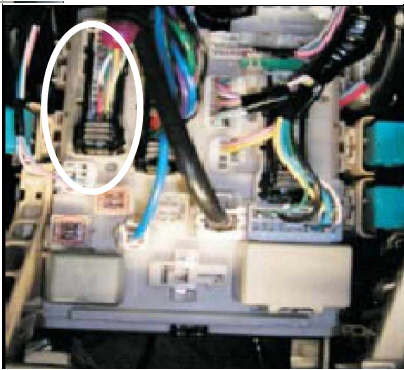

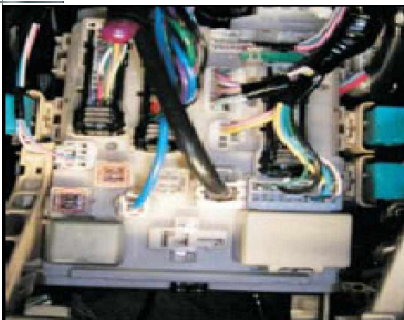


Specific vehicle alarm fitting instructions

Brand: <b>TOYOTA</b>		Model: <b>RAV4</b>		Year: <b>2006</b> →	
 	<b>(EK1) 16 Pin Connector</b>		<b>Function</b>		
	<b>Pin Number</b>	<b>Wire Colour</b>			
	16	Blue	Can H		
	15	White	Can L		
 	<b>(IB) 36 Pin Connector</b>		<b>Function</b>		
	<b>Pin Number</b>	<b>Wire Colour</b>			
	14	Yellow	LBC		
 	<b>REAR</b>		<b>(IS) 18 Pin Connector</b>		
	<b>Pin Number</b>	<b>Wire Colour</b>	<b>Function</b>		
	17	Grey	LBO		