
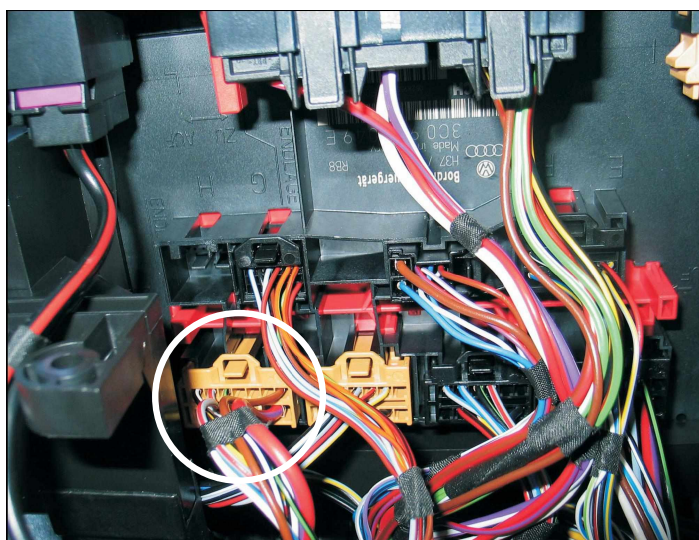
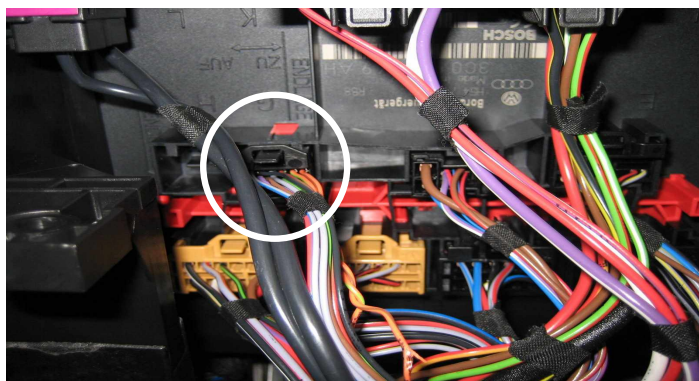


Specific vehicle alarm fitting instructions

Brand: **VW**

Model: **TOURAN**

Year: **2003**→

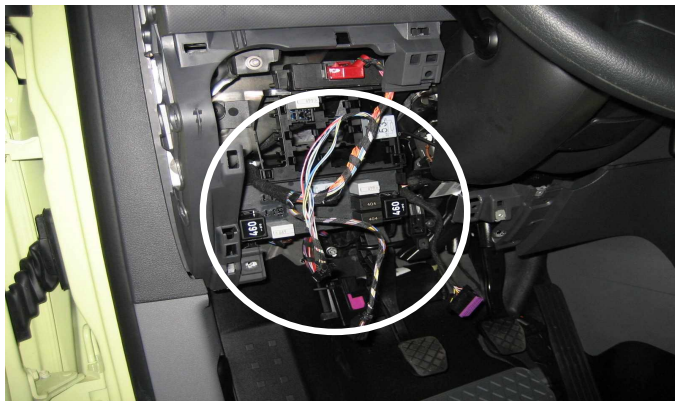

(G) 12 Pin Connector

Function

Pin Number	Wire Colour	Function
8	Orange-green	Can H
7	Orange-brown	Can L
9	Brown-red	LBO
1	Red-black	Block

(C) 16 Pin Connector

Function

Pin Number	Wire Colour	Function
11	Black-white	LBC